


To change a ZEISS Supreme Prime/ Supreme Prime Radiance lens mechanically to another unit (from Meter to Feet or vice versa) please follow the scale change instructions which you can find under the download section of the Support& Service area on the ZEISS Consumer Products website.

The unit change only works when you tell the lens which unit it is. Therefor you also had to change it on the electronic board of the lens.

This requires the same equipment as for the updating process (Windows machine and Connection Kit eXtended Data). Additionally download the ZEISS Lens Data Viewer which you can find under the following link (Please keep in mind that the Mode Switches underneath the XD connector of the lens should be in factory setting position!):


<https://www.zeiss.com/consumer-products/int/service/download-center/cinematography/software.html>

- Unzip the file and install the software on your computer. The starting screen after installation looks like this :

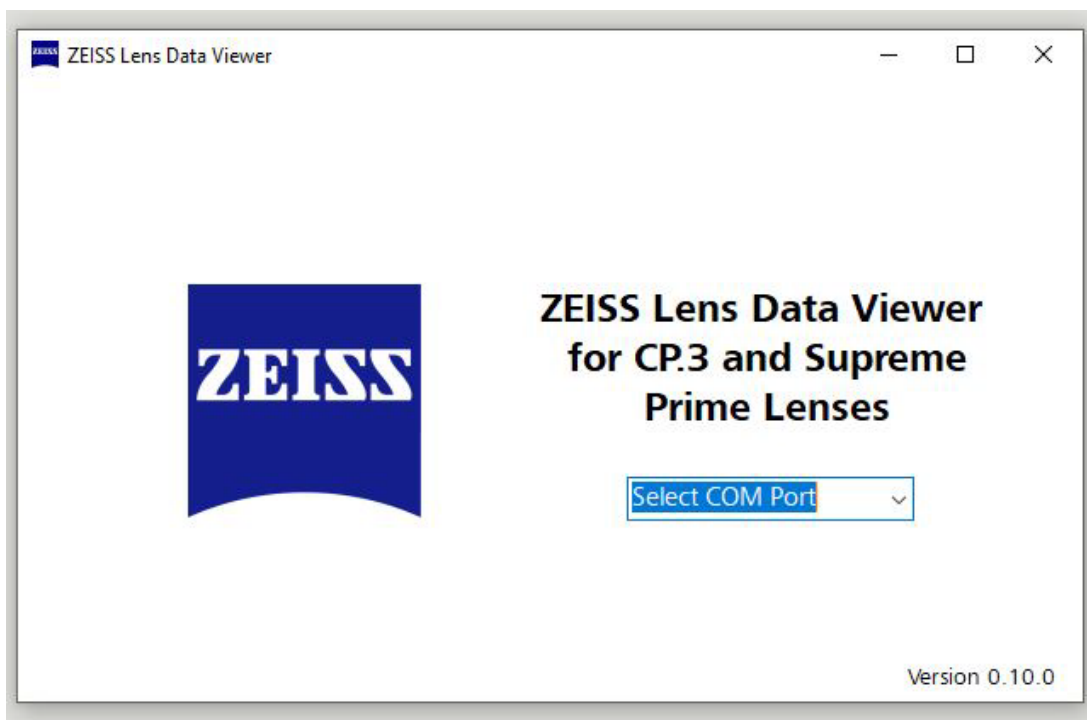


- Connect the Connection Kit eXtended Data to a free USB port on your computer and power it
- Plug its 4 pin male connector to the lens XD connector
- Locate the COM Port in the Device Management
- Select the correct COM Port

Then you see the lens information and several tabs in the top.

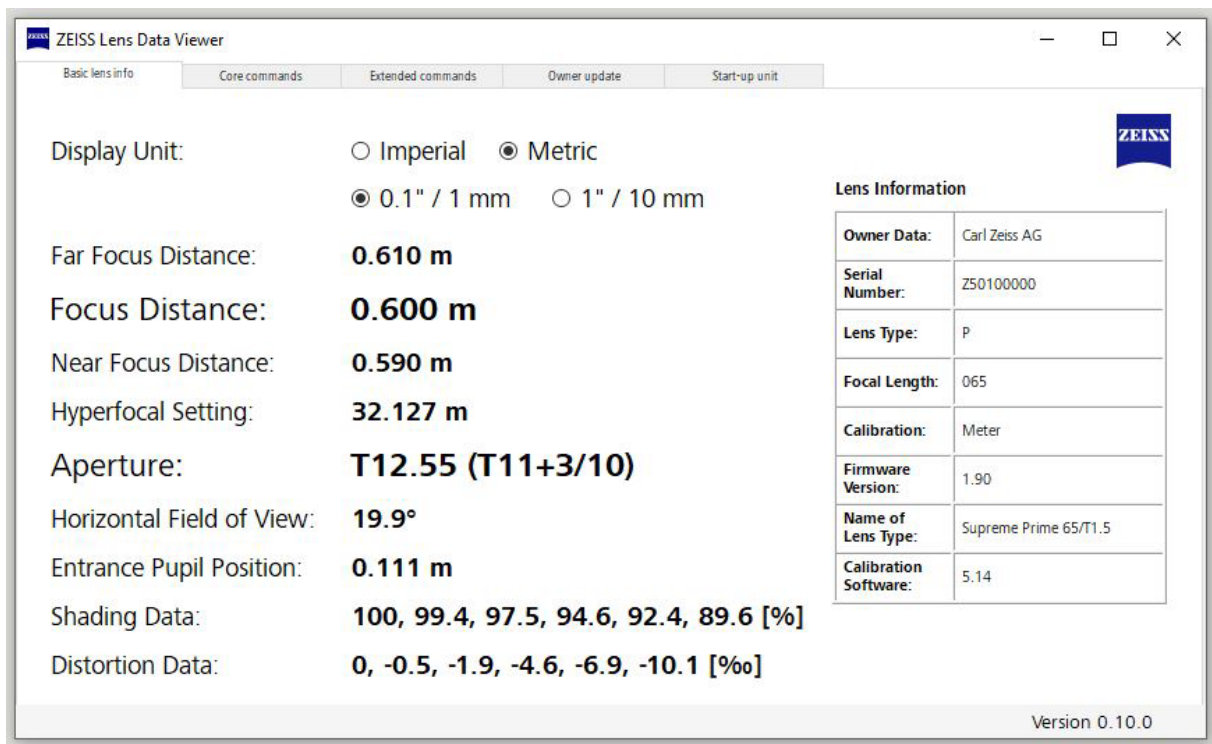

Go to “Start- up unit” and the following window will pop up:

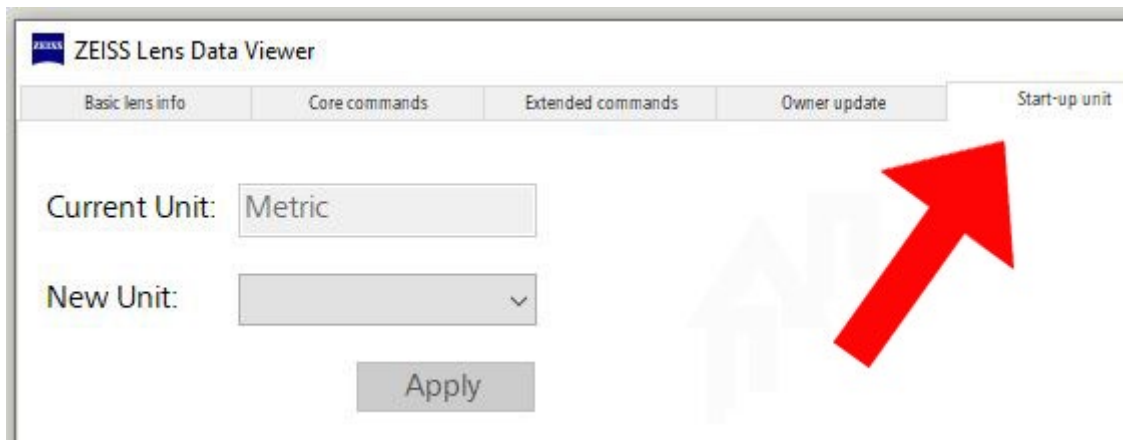

Choose the correct unit and push “ Apply” to activate it .

After that the ZEISS Lens Data Viewer should show the applied unit. You can countercheck on any cine camera. On ARRI set the Lens Mount Setting to “Default”. After that the camera info screen and hand unit show the correct unit.